

If the LED indicator fails to illuminate at start up, a system fault may be present. Contact your Land Rover Dealer/Authorised Repairer for assistance.

## ECO STALL RECOVERY

In the event that the engine stalls, it can be restarted by fully depressing the clutch pedal.

***Note:*** *Automatic stall restart will only operate once. If the engine is stalled a second time the engine must be restarted normally.*

## DIESEL PARTICULATE FILTER (DPF)

Diesel vehicles equipped with a particle filter have more efficient emission control. The particles in the exhaust gases are collected in the filter during normal driving.

When a DPF message is displayed, accompanied by an amber warning lamp, the filter requires a regeneration cycle to clean itself. This requires the engine to have reached normal operating temperature. Regeneration takes place automatically at an interval of approximately 300-900 km (190-560 miles) depending on driving conditions. Regeneration normally takes 10-20 minutes and is automatically requested by the engine control module if the vehicle is driven steadily at vehicle speeds between 60 km/h to 112 km/h (40 mph to 70 mph). It is possible that the regeneration process will occur at lower vehicle speeds, but the events may take a little longer at a 50 km/h (30 mph) average speed.

***Note:*** *If regeneration is not successfully carried out, the amber warning lamp will eventually be replaced by a red warning lamp.*

If a DPF message is displayed, accompanied by a red warning lamp, contact a Dealer/Authorised Repairer as soon as possible.