


STANDARD RADIO CONTROLS

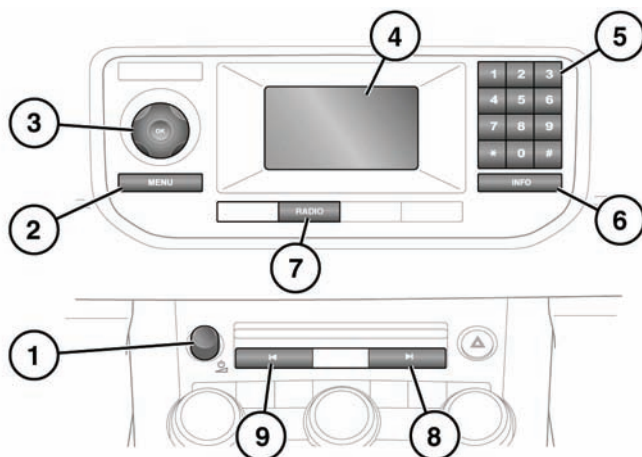

SL2144

See **164, STANDARD AUDIO CONTROLS.**

1. Press to switch on/off.

Note: The radio will switch off automatically after approximately 10 minutes if the ignition is turned off.

Rotate to adjust volume level.

Note: The maximum volume level will be restricted if the audio unit is used with the engine switched off.

2. **MENU** button:

- Audio settings
- Clock settings
- Language

3. **OK** and navigation menu control.

Use the navigation control to move to any menu cursor/highlight. When the required option is highlighted, press the **OK** button to select.

4. Audio Information display.

5. Keypad.

6. **INFO.** Traffic/News information.

7. **RADIO.** Waveband select (FM, FMAST, AM, AMAST).

When DAB is fitted, select for DAB1 or DAB2.

8. Seek up:

- Short press:
 - to select the next radio station upward in frequency.
- Long press:
 - to enter radio manual seek mode. In radio manual seek mode further short presses will change the frequency in single steps.

9. Seek down:

- Short press:
 - to select the next radio station downward in frequency.
- Long press:
 - to enter radio manual seek mode. In radio manual seek mode further short presses will change the frequency in single steps.