

## CONNECTING A VIDEO DEVICE

Inputs are provided for AV and USB 2.0 video media. See **126, CONNECTING A DEVICE**.

Video files must be recorded in the correct format. See DivX information **115, LICENSING**.

***Note:** When a new video source is selected, the audio source will always be synchronised. However, if an alternative audio source is subsequently selected, synchronisation can be achieved again with a long touch of the relevant **Audio** soft key.*

## REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** and **TV Parental Control** to be turned on or off.

When **Limousine Mode** is selected, the rear passengers can control the total cabin audio system via the remote control.

**TV Parental Control** allows an age limit threshold to be set. If the content of a TV programme is unsuitable, a message is sent to the rear screen.

***Note:** When TV Parental Control is off the age limit slider is hidden.*

***Note:** TV Parental Control is not available in all markets.*

## REAR MEDIA CONTROL FROM THE TOUCH SCREEN

To switch on a rear screen:

From the front touch screen, select **Left, Right** or both, as required.

**Selecting an audio source:**

**Listen (9)** will display a choice of audio sources: **Radio, DAB, CD, Stored CD, iPod, USB** and **AUX**.

***Note:** When watching a video source, an alternative audio source can be selected.*

**Selecting a video source:**

**Watch (10)** will display a choice of video sources: **DVD, TV, USB** and **AV1**.