

## CONNECTING A VIDEO DEVICE

Inputs are provided for AV and USB 2.0 video media. See **126, CONNECTING A DEVICE**.

Video files must be recorded in the correct format. See DivX information **115, LICENSING**.

**Note:** When a new video source is selected, the audio source will always be synchronised.

However, if an alternative audio source is subsequently selected, synchronisation can be achieved again with a long touch of the relevant **Audio** soft key.

## REAR MEDIA SETTINGS

The rear media settings screen allows

**Limousine Mode** and **TV Parental Control** to be turned on or off.

When **Limousine Mode** is selected, the rear passengers can control the total cabin audio system via the remote control.

**TV Parental Control** allows an age limit threshold to be set. If the content of a TV programme is unsuitable, a message is sent to the rear screen.

**Note:** When **TV Parental Control** is off the age limit slider is hidden.

**Note:** **TV Parental Control** is not available in all markets.

## REAR MEDIA CONTROL FROM THE TOUCH SCREEN

To switch on a rear screen:

From the front touch screen, select **Left**, **Right** or both, as required.

**Selecting an audio source:**

**Listen (9)** will display a choice of audio sources: **Radio**, **DAB**, **CD**, **Stored CD**, **iPod**, **USB** and **AUX**.

**Note:** When watching a video source, an alternative audio source can be selected.

**Selecting a video source:**

**Watch (10)** will display a choice of video sources: **DVD**, **TV**, **USB** and **AV1**.