

CONNECTING A VIDEO DEVICE

Inputs are provided for AV and USB 2.0 video media. See **126, CONNECTING A DEVICE**. Video files must be recorded in the correct format. See DivX information **115, LICENSING**.

Note: When a new video source is selected, the audio source will always be synchronised. However, if an alternative audio source is subsequently selected, synchronisation can be achieved again with a long touch of the relevant **Audio** soft key.

REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** and **TV Parental Control** to be turned on or off.

When **Limousine Mode** is selected, the rear passengers can control the total cabin audio system via the remote control.

TV Parental Control allows an age limit threshold to be set. If the content of a TV programme is unsuitable, a message is sent to the rear screen.

Note: When TV Parental Control is off the age limit slider is hidden.

Note: TV Parental Control is not available in all markets.

REAR MEDIA CONTROL FROM THE TOUCH SCREEN

To switch on a rear screen:

From the front touch screen, select **Left**, **Right** or both, as required.

Selecting an audio source:

Listen (9) will display a choice of audio sources: **Radio**, **DAB**, **CD**, **Stored CD**, **iPod**, **USB** and **AUX**.

Note: When watching a video source, an alternative audio source can be selected.

Selecting a video source:

Watch (10) will display a choice of video sources: **DVD**, **TV**, **USB** and **AV1**.