


DAB RADIO CONTROLS

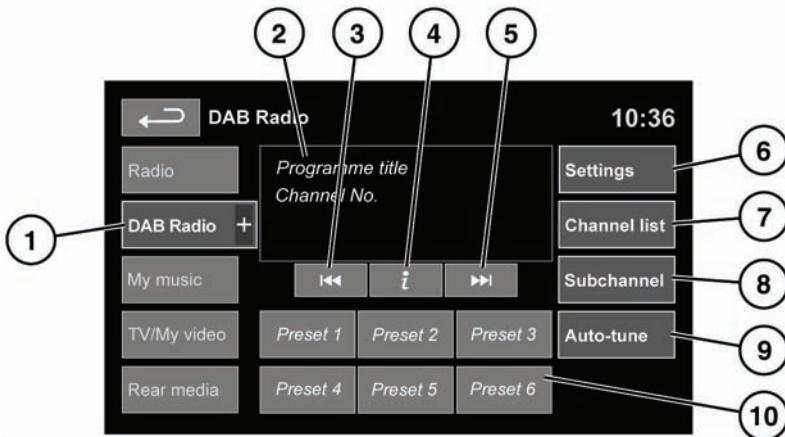

SL1850

See 108, TOUCH SCREEN HOME MENU.

1. **DAB Radio:** Band selection. Touch to view and select a DAB band (**DAB 1, 2 or 3**). The radio will tune to the last used channel on that band. Touch again to close.

The DAB band selection box will close automatically after 5 seconds without use.

2. Display showing the current channel, the associated Ensemble and relevant DAB radio text.

3. Seek down:

- Short touch to seek previous available channel.
- Long touch to seek previous available Ensemble. The first channel in the new Ensemble will be selected.

4. Channel information: Touch to view DAB text and channel information.

5. Seek up:

- Short touch to find the next available channel.

- Long touch to find the next available Ensemble. The first channel in the new Ensemble will be selected.

6. **Settings:** Select to view the DAB Settings menu:

- **Options:** To activate/deactivate FM Traffic and Link DAB and to alter DAB country and DAB format settings (with vehicle stationary).

- **Announcements:** Select an alarm announcement and up to 3 other announcement types (traffic, news etc.) from the list. The selected announcements will interrupt the current programme when broadcast.

7. **Channel list:** Touch to view a list of available Ensembles and channels. The list can be sorted by **Ensemble**, **Channel**, **Subchannel** or by **Category**.

- If an **Ensemble** is selected from the list, all available channels from that ensemble will be displayed.