

14. CD eject button.
15. Seek down:
  - Short press:
    - to select the previous radio station downward in frequency or,
    - to select the previous track on chosen audio source.
  - Long press:
    - to enter radio manual seek mode or,
    - to scan backward through a CD track. In radio manual seek mode further short presses will change the frequency in single steps.
16. **MODE**: Press repeatedly to scroll through all audio.
17. Press to increase volume.
18. Press to decrease volume.
19. Seek down:
  - Short press to select the previous radio preset or previous track on chosen audio source.
  - Long press to scan backward through a track.
20. Seek up:
  - Short press to select the next radio preset or next track on chosen audio source.
  - Long press to scan forward through a track.

## ADAPTIVE VOLUME CONTROL (AVC)

The AVC feature adjusts the volume level to compensate for the changes in road noise as the vehicle speed increases or decreases.

*Note: The AVC setting represents the volume increase and not the volume level.*

If the AVC level is set to **zero**, there will be no volume increase. With a low level setting, the volume increase at speed will be minimal. If a high level setting is used, there will be a noticeable increase of volume at greater speed.

To set the AVC level:

1. Press the **MENU (2)** button.
2. Select **Audio Settings**.
3. Select **Adaptive Volume** then press **OK**.
4. Use the navigation controls to set the required level of AVC effect in the range 0 to 7.

## TONE ADJUSTMENT

To adjust the tone:

1. Press the **MENU (2)** button.
2. Select **Audio Settings**.
3. Select **Sound**. Settings for bass, treble, balance and fade can be adjusted with the navigation controls.
4. Press **OK** to store the settings and return to the previous screen.

*Note: If no adjustment is made for several seconds, the display will revert to the previously displayed screen.*

## LICENSING

See **115, LICENSING**.