

Trip computer information is displayed on the instrument panel.



SL1778

Press the **TRIP** button on the end of the left column stalk repeatedly to display the trip data in the following order:

- Date and odometer.
- Trip distance.
- Average speed.
- Average fuel consumption.
- Instantaneous fuel economy.
- Range.
- Blank.

To reset the displayed trip data, press and hold the **TRIP** button.

## TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.

## RANGE

This shows the predicted distance, miles or kilometres, that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

## METRIC/IMPERIAL/MIXED DISPLAY

The display of metric, imperial or mixed units is selected via the instrument panel menu.

## SERVICE INTERVAL INDICATOR

The service interval message will only be displayed when the vehicle has less than 3200 km (2000 miles) before the service is due.

When the ignition is switched on, and the vehicle has started its service countdown, **SERVICE REQ'D XXXX km (XXXX MLS) / XX DAYS** is displayed in the message centre.

When the service distance has been reached, **SERVICE REQUIRED** is displayed in the message centre.

**!** If no service interval indicator is displayed during the vehicle service cycle, make sure that your vehicle is serviced in accordance with the intervals, as stated in the Service Portfolio.