


RADIO CONTROLS

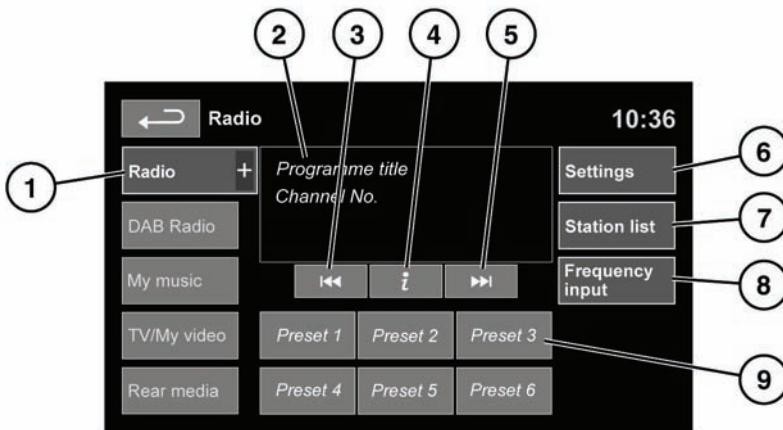

SL1855

See 108, TOUCH SCREEN HOME MENU.

1. Radio: Waveband selection. Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.

The waveband selection box will close automatically after 5 seconds without use.

2. Displays information about the current station. Some of this information is also displayed in the instrument panel.

3. Seek down:

- Short touch to auto seek down the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.

4. Information. More information from the broadcasting station.

5. Seek up:

- Short touch to auto seek up the frequency to the next radio station.
- Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.

6. Settings: Touch to view and activate/deactivate the following features: **RDS**, **Traffic**, **News**, **AF** and **REG**. See 119, **RADIO DATA SYSTEM (RDS)**.

7. Station list (FM only): Select to view a list of available stations on the waveband. The list can be sorted by **Frequency**, **Name** or **PTY** (pop, news, sport etc.), by selecting the appropriate soft key. Touch to select the chosen station.

If the stations are sorted by category, touch the chosen category to view and select a corresponding station.