


# Exiting the vehicle

## KEYLESS LOCKING

- ⚠ Never double lock the vehicle with people, children or pets inside. In the event of an emergency they would be unable to escape and the emergency services would be unable to release them quickly.**
- ⚠ The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including when inside laptop bag), games console etc.**

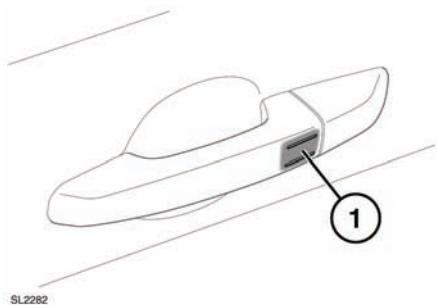

SL2282

The vehicle will not lock automatically.

**Note:** Keyless locking will activate only if the Smart Key is detected outside the vehicle. If no Smart Key is present, no locking will occur.

- To single lock the vehicle, touch only the lock sensor on the door handle (1) once without grabbing the door handle.

**Note:** Do not place fingers round the back of the handle while touching the sensor. Doing so will prevent the vehicle from locking.

The hazard warning lamps will flash once to confirm locking.

- To double lock the vehicle, touch only the lock sensor (1) twice within three seconds without grabbing the door handle.

**Note:** Do not place fingers round the back of the handle while touching the sensor. Doing so will prevent the vehicle from locking.

The hazard warning lamps will flash twice to confirm (with a long second flash). An audible confirmation may also be given (if enabled).

**Note:** When locking the vehicle via Keyless locking, if one or more of the doors, the bonnet or the tailgate is not fully closed, or the ignition is ON, the vehicle will NOT lock. There will be NO audible mislock error warning. The hazard warning lamps will NOT flash and the door mirrors (if enabled) will NOT fold in. Check that all doors, the bonnet and the tailgate are closed properly. Ensure the ignition is turned OFF and lock the vehicle again. If the mislock persists, consult a Land Rover Dealer/Authorised Repairer.

## KEYLESS GLOBAL CLOSING

To initiate global window closing (if enabled), touch and hold the lock sensor (1) for three seconds. This will also single lock the vehicle and activate the alarm.

**Note:** The windows will close only while the sensor (1) is covered. To fully secure the vehicle, continue to touch the sensor until all windows are fully closed.

## DRIVE-AWAY LOCKING

Drive-away locking automatically locks all doors at a set speed when the vehicle is in motion. This feature can be enabled/disabled via Drive-away locking in the Vehicle Settings menu. See 59, VEHICLE INFORMATION AND SETTINGS MENU.