


ELECTRIC WINDOWS AND PANORAMIC ROOF BLIND

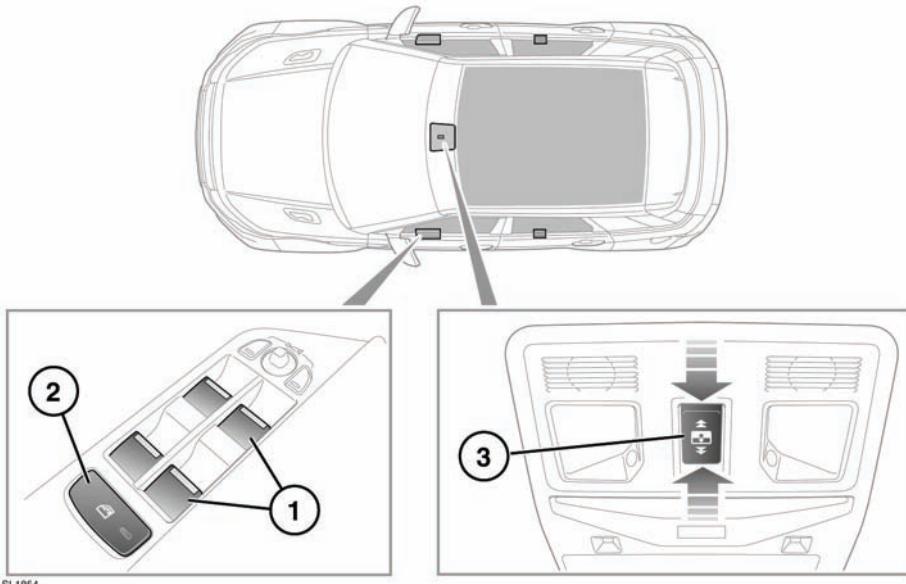

SL1854

⚠ To prevent accidental operation, never leave the Smart Key in the vehicle if children or animals are also left in the vehicle.

1. Briefly pull a switch fully up and release, the window will continue to rise until fully closed. Briefly press a switch fully down and release, the window will continue to lower until fully open. Pressing or pulling a switch again will stop the window.

The windows will operate for 5 minutes after the ignition is switched off, as long as none of the doors are opened.

Rear windows have a short drop feature for passenger comfort. The first press of a switch will lower the window a short distance to give a flow of air. A second

press will lower the window to its full extent.

Note: Coupe models have fixed rear windows and a different switch pack.

2. Rear window isolator switch.

The rear windows are isolated when the indicator light in the switch is illuminated.

⚠ If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.

3. Roof blind open/close switch:

To open the blind: Push from the rear of the switch and release. The blind will slide fully open.