


HEADLAMP REMOVAL

Moving the left headlamp unit to access bulbs;

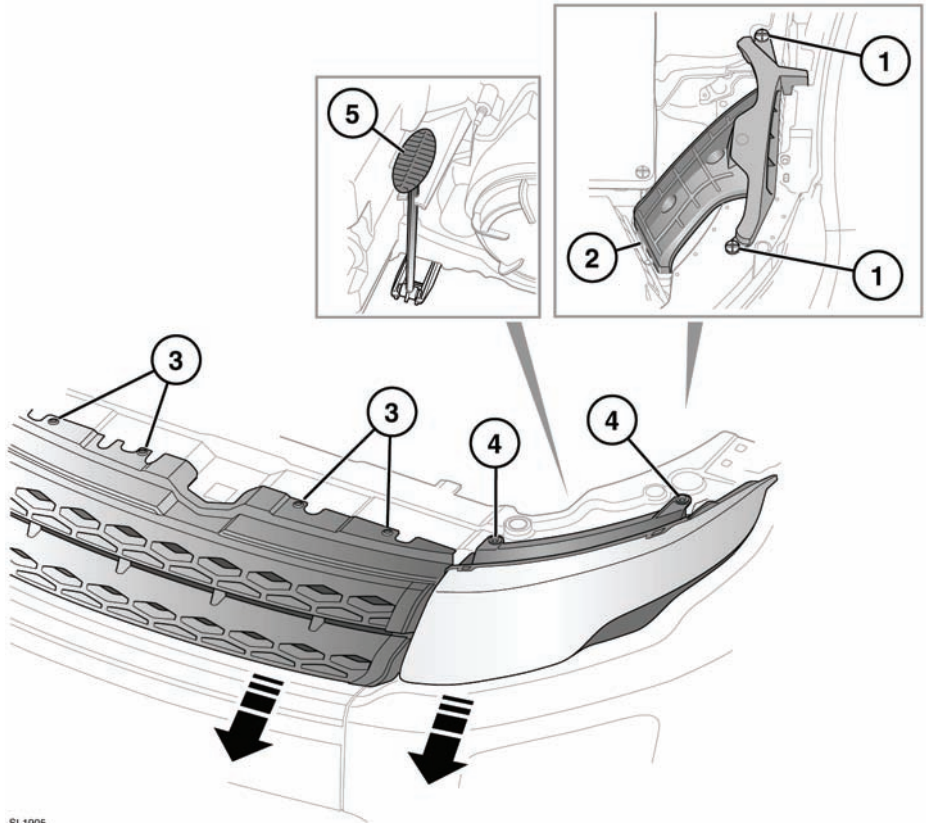


SL1905

1. Remove the two plastic fixings.
2. Pull the tube up to release from the air box. This will allow more room for manoeuvrability.
3. Remove the four grille fixings.
4. Remove the two retaining bolts.
5. At the rear of the headlamp unit, pull up on the T grip release mechanism and hold while sliding the headlamp unit forward 40 mm (1.5 in).

Maintenance

Moving the right headlamp unit to access bulbs;

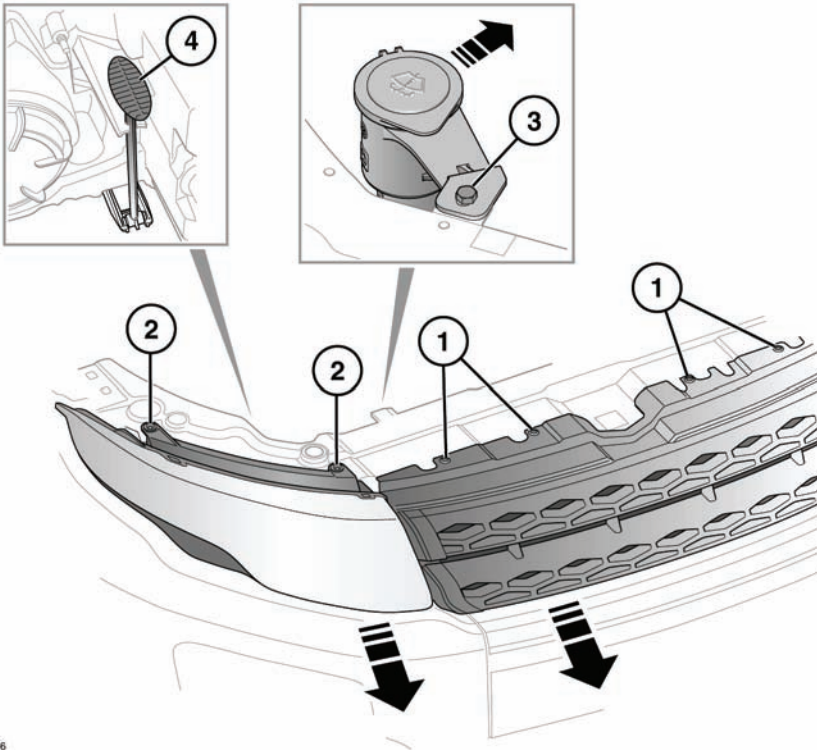

SL1916

1. Remove the four grille fixings.
2. Remove the two retaining bolts.
3. Remove the fixing then move the filler tube rearwards. This will allow more room for access to the bulb holders.
4. At the rear of the headlamp unit, pull up on the T grip release mechanism and hold while sliding the headlamp unit forward 40mm (1.5 in).