

# Towing

- If the vehicle is loaded to maximum Gross Vehicle Weight (GVW) the nose weight is limited to 150kg (330lbs). See **218, WEIGHTS**.
- Ensure that a suitable breakaway cable or secondary coupling is used. Refer to the trailer manufacturer's instructions for guidance.
- Ensure that the tow ball is secure.
- Check the operation of all trailer lights.

## Australia only:

- **Nose weight** - Must be a minimum of 7% of gross caravan/trailer weight, up to a maximum of 150 kg (330 lb).

## TRAILER ELECTRICAL CONNECTION



Attach only approved electrical connectors, which are in good condition, to the trailer socket.

The vehicle connector provides a 5 amp output which must not be exceeded. An accessory harness kit increasing output to 15 amp is available from your Land Rover Dealer.



When a trailer electrical connection is made and the vehicle's direction indicators are used, the trailer warning indicator will flash in time with the direction indicators.

## TAILGATE CLEARANCE



When towing, ensure there is sufficient clearance before opening or closing the tailgate.

## REAR PARKING AIDS

The rear parking aids sensors are automatically disabled when a trailer with an approved electrical connector is connected.

**Note:** Trailers fitted with LED lights will not disable the rear parking aids sensors. When reverse gear is selected, the attached trailer will be detected as an obstacle.

## TRAILER STABILITY ASSIST (TSA)

When a trailer is attached, TSA will automatically detect when a trailer sway is developing. It will then gradually reduce vehicle speed by cutting engine power and applying the brakes to help regain control.

## HITCH ASSIST

Hitch assist is a user selectable touch screen feature that can aid the process of guiding the vehicle to the trailer tow hitch. See **106, SURROUND CAMERA SYSTEM**.

## DETACHABLE TOW BALL

Fit and remove instructions are supplied with this accessory fit item. Ensure that they are kept in a safe place.