

Towing

- If the vehicle is loaded to maximum Gross Vehicle Weight (GVW) the nose weight is limited to 150kg (330lbs). See **218, WEIGHTS**.
- Ensure that a suitable breakaway cable or secondary coupling is used. Refer to the trailer manufacturer's instructions for guidance.
- Ensure that the tow ball is secure.
- Check the operation of all trailer lights.

Australia only:

- **Nose weight** - Must be a minimum of 7% of gross caravan/trailer weight, up to a maximum of 150 kg (330 lb).

TRAILER ELECTRICAL CONNECTION



Attach only approved electrical connectors, which are in good condition, to the trailer socket.

The vehicle connector provides a 5 amp output which must not be exceeded. An accessory harness kit increasing output to 15 amp is available from your Land Rover Dealer.



When a trailer electrical connection is made and the vehicle's direction indicators are used, the trailer warning indicator will flash in time with the direction indicators.

TAILGATE CLEARANCE



When towing, ensure there is sufficient clearance before opening or closing the tailgate.

REAR PARKING AIDS

The rear parking aids sensors are automatically disabled when a trailer with an approved electrical connector is connected.

Note: Trailers fitted with LED lights will not disable the rear parking aids sensors. When reverse gear is selected, the attached trailer will be detected as an obstacle.

TRAILER STABILITY ASSIST (TSA)

When a trailer is attached, TSA will automatically detect when a trailer sway is developing. It will then gradually reduce vehicle speed by cutting engine power and applying the brakes to help regain control.

HITCH ASSIST

Hitch assist is a user selectable touch screen feature that can aid the process of guiding the vehicle to the trailer tow hitch. See **106, SURROUND CAMERA SYSTEM**.

DETACHABLE TOW BALL

Fit and remove instructions are supplied with this accessory fit item. Ensure that they are kept in a safe place.