

REAR FOG LAMP BULB REPLACEMENT


- ⚠ Always find a safe place to stop, off the highway and away from traffic.**
- ⚠ Apply the parking brake. Engage Park (P) on automatic vehicles, select 1st or reverse gear on manual vehicles.**
- ⚠ Switch on the hazard warning lamps.**
- ⚠ Place a warning triangle at a suitable distance behind the vehicle, facing towards oncoming traffic.**
- ⚠ Disconnect trailer/caravan from vehicle.**
- ⚠ Ensure that all passengers, and animals, are out of the vehicle and in a safe place away from the highway.**
- ⚠ If the vehicle has been driven recently, do not touch exhaust system components until they have cooled.**

Access to a rear fog lamp housing is from beneath and behind the rear bumper. The bulb holder is a black plastic unit that incorporates the bulb. No tools are required but a torch may be of use.

1. To remove the bulb holder, press in the outer wings on the black plastic unit and pull the holder free of the housing.
2. To separate the bulb holder from the electrical connector, first push up the connector lock.
3. Push in the release mechanism while pulling the connector and bulb holder apart.

Note: Inside the bulb holder are three locating lugs. When fitting the new bulb unit, the lugs must mate up to the connector correctly.

Refitting is a reverse of the removal process. Ensure that the connector lock is pressed down and that the bulb unit locates securely into the fog lamp housing.

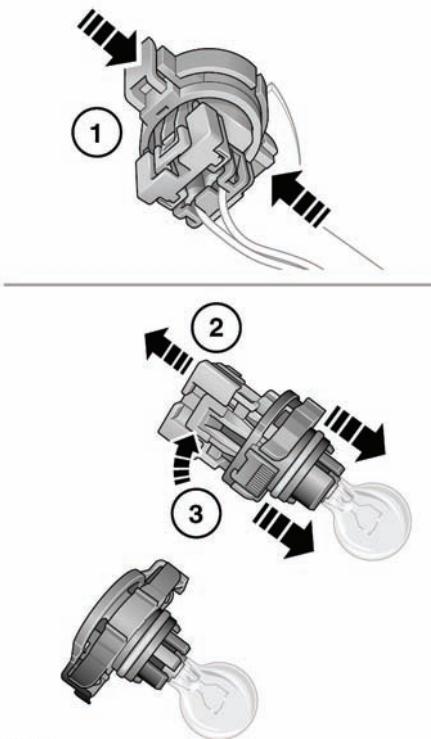

SL2097