

2. Press the steering wheel **MODE** button repeatedly to select TV. Press the forward or back buttons to move up or down your preset channels. The channel number will be displayed and after a short pause the TV programme will display.

***Note:** Not all channels are populated with a TV programme. Some channels broadcast only at pre determined times whereas others may broadcast continuously throughout the day and night.*

## **DUAL VIEW VIDEO OPERATION**

When the video programme begins play, a root menu with information about the video programme and its content will be displayed on screen.

***Note:** Information and style may vary due to differing video media formats.*

***Note:** If the chosen video media is DVD, then a play/pause soft key is displayed between the Seek soft keys (9) and (10).*

## **HEADPHONES**

The headphones provided with dual view are identical to those provided with rear seat entertainment. See **139, HEADPHONES**