

2. Press the steering wheel **MODE** button repeatedly to select TV. Press the forward or back buttons to move up or down your preset channels. The channel number will be displayed and after a short pause the TV programme will display.

Note: Not all channels are populated with a TV programme. Some channels broadcast only at pre determined times whereas others may broadcast continuously throughout the day and night.

DUAL VIEW VIDEO OPERATION

When the video programme begins play, a root menu with information about the video programme and its content will be displayed on screen.

Note: Information and style may vary due to differing video media formats.

Note: If the chosen video media is DVD, then a play/pause soft key is displayed between the Seek soft keys (9) and (10).

HEADPHONES

The headphones provided with dual view are identical to those provided with rear seat entertainment. See 139, **HEADPHONES**