## Entering the vehicle

 The approach illumination period set at the factory is 30 seconds. This delay period may be configured to provide illumination lasting between 0 and 240 seconds. See 59, VEHICLE INFORMATION AND SETTINGS MENU

**Note:** In some markets a second press of the button will turn on the headlamps and reversing lamps. A third press will be required to turn the lamps off.

- **6.** Emergency key access: Slide open the side cover to release, then remove.
- 7. Remove the emergency key blade and unfold.
- 8. If the Smart Key fails to open the vehicle, insert the key blade into the slot at the base of the door lock cover and gently lever the key blade upwards. Carefully twist the key blade, to lever the cover off the retaining clips. Insert the key blade into the exposed lock and turn to operate the lock. The alarm will sound.

**Note:** When replacing the door lock cover, locate the top retaining clips before pushing the cover into position.

**Note:** When the left hand front door is unlocked using the key blade, the alarm will sound until the Smart Key is positioned correctly.

**Note:** A replacement Smart Key can be obtained only from your Land Rover Dealer. The Dealer will require proof of identification and ownership.

Notify your Dealer/Authorised Repairer immediately if a Smart Key is lost or stolen.

- 9. Keyless entry/exit:
  - Exterior door handles have separate unlock and lock sensors. The unlock sensor is located on the inner surface of the handle.

## SINGLE-POINT/MULTI-POINT ENTRY

When you press the unlock button, your vehicle will unlock in one of two ways:

- Single Point Entry: Unlocks the driver's door and fuel filler flap only. A second press is required to unlock the remaining doors and the tailgate.
- 2. Multi-Point Entry: Unlocks all doors, fuel filler flap and the tailgate on the first press.

To change from Single to Multi-Point entry (or vice versa), press both the lock and unlock buttons simultaneously for three seconds. The hazard warning lamps will flash twice to confirm the change.

This feature may also be set via the settings menu. See **59**, **VEHICLE INFORMATION AND SETTINGS MENU**.

Note: If, when the vehicle is unlocked, an audible warning is emitted, this will be a 'Mislock' error. There may be a fault with either of the alarm sensors. Consult your Dealer /Authorised Repairer as soon as possible.

## GLOBAL OPENING

Press and hold the Smart Key unlock button for 3 seconds to unlock the vehicle and open all windows.

Press any button on the Smart Key to cancel the operation.