

## SYSTEM SETTINGS

- **Button feedback:** Soft key confirmation tone on or off.
- **Clock adjust:** Select 12 or 24 hour clock. Set current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

*Note: The clock can also be adjusted from the touch screen time display.*

- **Home menu shortcuts:** Select up to three items from the displayed list to appear as shortcuts on the **Home Menu**. Select **Clear** to deselect highlighted items.
- **Language:** Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

*Note: Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

- **Volume presets:** Adjust volume for the available systems (announcements, parking aid, phone, voice etc.).

## VOICE SETTINGS

- **Command list:** View the categories and the acceptable voice commands. Select an **Information** button to view alternative function commands.
- **Voicetags:** View the categories. Select a category to manage the voicetags for the chosen system. See **141, VOICETAGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).

- **Preferences:** Select to alter the following settings:
  - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **2**, it is necessary to complete a training program first. To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
  - **Voice feedback:** Select **On** or **Off**.
  - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user. Select **User 1** or **User 2** and follow the on screen and audible instructions. See **141, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **140, USING VOICE CONTROL**.

## VALET

### Selection:

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the luggage compartment. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

From the **Home menu**, select **Valet**: