## Portable media

**Note:** If more than 5 devices are detected, it may be necessary to use the scroll bar to see the entire list.

- When prompted, enter the PIN code into your device. See your device operating instructions for further information.
- 9. Once your device is paired and connected to the system, a confirmation message will be displayed before switching to the My music, Bluetooth<sup>®</sup> view.

Note: Due to the duration of a Bluetooth<sup>®</sup> search, it is advised that the time-out to home screen feature is switched off before attempting to search for Bluetooth<sup>®</sup> devices. This setting can be changed within Vehicle, Syst settings, Display set, Timeout to home screen.

## LOSS OF CONNECTION

If a loss of connection between the vehicle and the Bluetooth<sup>®</sup> device occurs, a pop-up is displayed. Select **Reconnect** to automatically restore the connection. A confirmation pop-up will appear before the touch screen reverts to its previous mode.

## CHANGING/DISCONNECTING A DEVICE

- From the menu, select Change device.
- Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.