






## SAFETY PRECAUTIONS

-  Only use containers specifically designed for carrying fuel, and always remove them from the vehicle to fill them. Failure to do so may result in spillage which could cause a fire.
-  Switch off the engine when refuelling, as it is both a source of extreme temperatures, and electrical sparks. The resulting fire and explosion may cause serious injury and death.
-  Switch off any personal electronic devices such as mobile phones, or music players. They have the potential to cause electrical sparks. The resulting fire and explosion may cause serious injury and death.
-  Do not smoke, use a naked flame, or cause sparks. The resulting fire and explosion may cause serious injury and death.
-  Do not overfill the fuel tank. Overfilling may cause spillage when the vehicle is driven. Spillage may also occur if the fuel expands in high ambient temperatures.

## DIESEL ENGINED VEHICLES

Land Rover recommends that only premium brand diesel fuels are used.

**Note:** Land Rover vehicle's are capable of running with up to a 7% blend of bio-diesel in accordance with European Standard EN590.


## SULPHUR CONTENT

The Sulphur content of diesel used in Land Rover vehicles should not exceed 0.3% (3000 parts per million).

In some countries diesel will contain higher levels of Sulphur, which will require reduced service intervals to reduce the effects on

engine components. If in doubt contact a local Land Rover Dealer/Authorised Repairer for advice.

## FUEL FILLER CAP

-  Open the fuel filler cap slowly and allow the pressure to release before fully removing the cap to avoid fuel spillage due to rapid expansion.

The fuel filler cap is located on the right-hand side of the vehicle, at the rear.



E135710

### Removing the cap

1. Hold the cap steady, insert the key and turn it half a turn counter clockwise.
2. Remove the key.
3. Twist the cap counter clockwise and position it aside.

### Refitting the cap

1. Replace the cap and twist until it clicks three times.
2. Hold the cap steady, insert the key and turn it half a turn clockwise.
3. Remove the key.