


Audio system

- Treble.
 - Balance.
 - Fade.
 - Loudness.
 - Defeat.
 - Volume.
- Long press: access the audio setup menu.
- 14.** Select tuning mode or pause/play current audio source (CD, MP3 etc.).
- 15.** Release button. Release and remove the audio system face plate for security or to access the system reset button.

AUDIO CONTROLS (STANDARD SYSTEM)

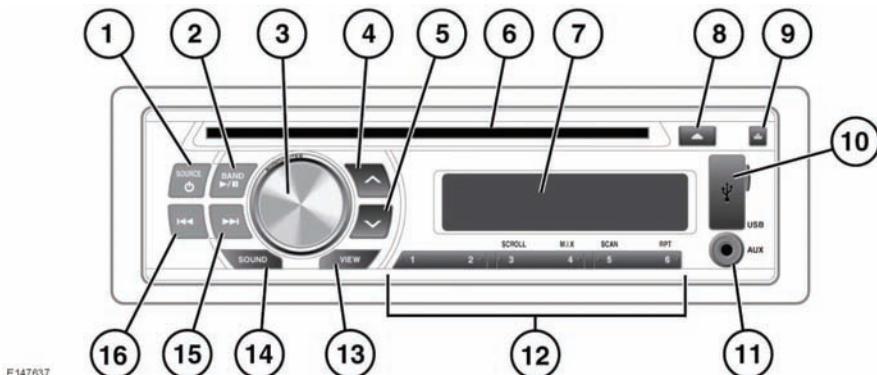

- E147637**
1. Power/source.
 - Short press - switch source between **TUNER**, **DISC**, **USB AUDIO** and **AUXILIARY**.
 - Long press - turn on/off the audio system.
 2. Select band (Radio mode) or pause/play current audio source (CD/MP3 mode).
 3. Volume control/menu select.
 - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
 - Press to select a menu item.
 4. Previous folder (MP3 mode). In radio mode, press and hold to turn on traffic announcements.
 5. Next folder/TA.
 6. CD loading slot.
 7. Audio information display.
 8. CD eject.
 9. Release button. Release and remove the audio system face plate for security or to access the system reset button.
 10. USB connection.
 11. Auxiliary audio input.
 12. Preset buttons.
 13. Change the displayed information.