


## PORTABLE MEDIA CONTROLS

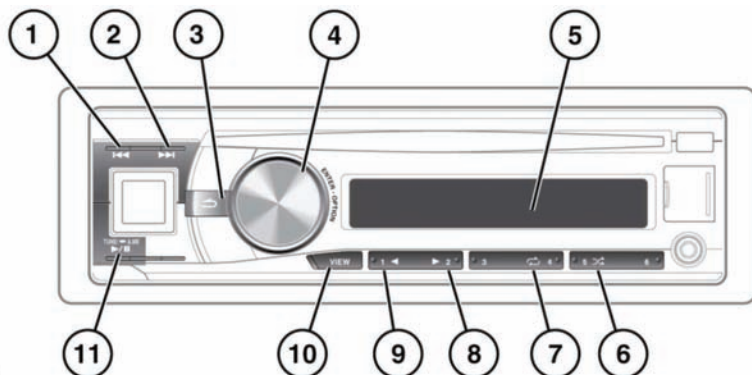

E145976

1. Seek down.
    - Short press - select the previous track on the chosen audio source.
    - Long press - scan back through the current track.
  2. Seek up.
    - Short press - play the next track on the chosen audio source.
    - Long press - scan forward through the current track.
  3. Back.
    - Short press - return to the previous menu.
    - Long press - close the menu.
  4. Volume control/search/menu select:
    - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
    - Press during MP3 playback to search by folder name or by file name. See **43, MEDIA SEARCH**.
    - When a menu is open, rotate to switch between menu items and press to confirm a selection.
  5. Information display screen.
  6. Shuffle. Press repeatedly to select from one of the following options.
    - Shuffle - the tracks are played in a random sequence (CD mode).
    - Shuffle folder - the tracks from the current folder are played in a random sequence (MP3 mode).
    - Shuffle all - all tracks from the current audio source are played in a random sequence (MP3 mode).
  7. Repeat. Press repeatedly to select from one of the following options:
    - Repeat track - plays the current track continuously.
    - Repeat folder - the tracks from the current folder are played continuously (MP3 mode).
- Note:** By default, the current folder/CD will be played continuously.
8. Next folder (MP3 mode).
  9. Previous folder (MP3 mode).
  10. Change the displayed information.
  11. Pause/play.