


RADIO CONTROLS

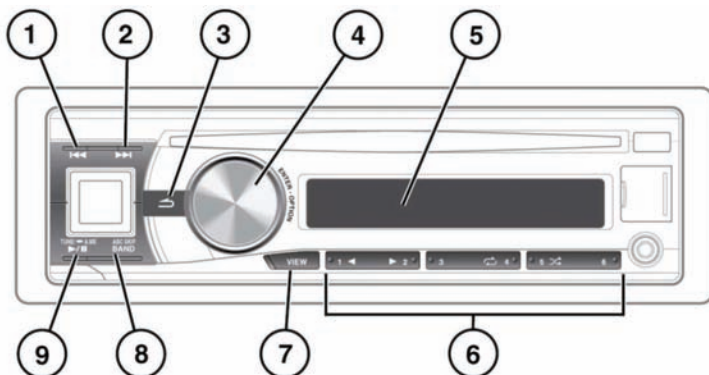

E145938

1. Seek down:
 - Short press - auto seek down the frequency to the previous radio station.
 - Long press - seek continuously down through the radio frequencies.
2. Seek up:
 - Short press - auto seek up the frequency to the next radio station.
 - Long press - seek continuously up through the radio frequencies.
3. Back.
 - Short press - return to the previous menu.
 - Long press - close the setup menu.
4. Volume control/frequency search/menu select:
 - Rotate to adjust the volume.
 - Press to enter frequency search mode and then rotate to select the desired frequency. Once the desired frequency has been reached, press again to exit frequency search mode.
 - When a menu is open, rotate to switch between menu items and press to confirm a selection.
5. Information display screen.
6. Preset stations:
 - Short press - select a preset station.
 - Long press - store the current radio frequency.
7. Change the displayed information.
8. Band select.
 - Short press - switch between bands. Select from **F1** (FM1), **F2** (FM2), **F3** (FM3), **MW** and **LW**.
 - Long press - activate traffic announcements. The radio will automatically tune to any traffic announcement broadcasts.
9. Tuning mode select.
 - Short press - select between the following modes:
 - **DX SEEK** - both strong and weak stations will be stored during auto-store.
 - **SEEK** - only the strongest stations will be stored during auto-store.
 - Off - manual seek.
 - Long press - auto-store the current frequency. Up to six radio frequencies can be stored in presets **1-6**.