

3. Turn the starter switch on then off and remove the key.
4. Undo the battery negative clamp (black battery cable). Lift the cable and clamp clear of the battery terminal. If a backed-up sounder is fitted, disconnection must be within 15 seconds of removing the starter key from the starter.
5. Undo the positive clamp (red battery cable) then lift the cable and clamp clear of the battery terminal.
6. At the side of the battery near the positive terminal, disconnect the vent pipe.
7. Undo the battery clamp and lift the battery clear of the vehicle.



Used batteries must be disposed of correctly as they contain a number of harmful substances. Seek advice on disposal from your Land Rover Dealer/Authorised Repairer and/or your local authority.



Fit only a battery of the correct type and rating. Fitting an incorrect battery may result in a fire, or damage to the electrical system. If you are in any doubt when fitting a battery seek qualified assistance.



When refitting the battery ensure that no metal objects, or vehicle components, come into contact with the battery terminals. Metal objects can cause a spark or short circuit, both of which may result in an explosion.



Ensure that when fitting a battery to the vehicle, the terminals and battery clamps are clean, and lightly coated with petroleum jelly. This will ensure good electrical connections are made, and help to prevent corrosion.



Always follow the battery manufacturers instructions. Failure to do so may result in damage to the vehicle and/or the electrical system.

A new battery should be supplied with plastic terminal covers. Leave the covers in place when fitting the battery, and remove them one at a time to fit the battery cable clamps.

Refitting is an exact reversal of the removal procedure. If you are in any doubt about fitting a battery seek qualified assistance before attempting to fit the battery.

EFFECTS OF DISCONNECTING

After reconnecting the battery, a number of the vehicle systems will reset automatically. This may take a few minutes. Some of the resets require the vehicle to be driven. This in no way affects safe operation of the vehicle.

The remote key fob must be re-synchronised in accordance with **7, REMOTE KEY FOB BATTERY REPLACEMENT**.