


## PORTABLE MEDIA CONTROLS (STANDARD SYSTEM)

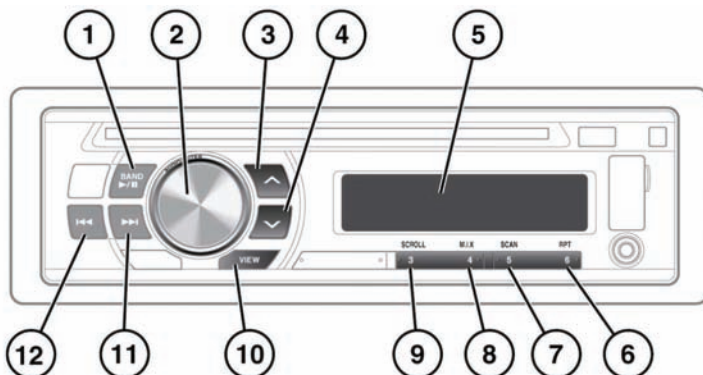

E147587

1. Pause/play.
2. Volume control/menue select:
  - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
  - When a menu is open, rotate to switch between menu items and press to confirm a selection.
3. Previous folder (MP3 mode).
4. Next folder (MP3 mode).
5. Information display screen.
6. Repeat.
  - Short press - continuously play the current track.
  - Long press - continuously play the tracks in the current folder (MP3 mode).
- Note:** By default, the current folder/CD will be played continuously.
7. Scan.
  - Short press - play the first 10 seconds of every track on the disc.
  - Long press - play the first 10 seconds of the first track in each folder (MP3 mode).
8. Shuffle.
  - Short press - play each track on the disc in a random sequence (CD mode).
  - Long press - play each track in the selected folder in a random sequence (MP3 mode).
9. Scroll through longer track names etc on the display screen.
10. Change the displayed information.
11. Seek up.
  - Short press - play the next track on the chosen audio source.
  - Long press - scan forward through the current track.
12. Seek down.
  - Short press - select the previous track on the chosen audio source.
  - Long press - scan back through the current track.