HEATED SCREENS



Do not stick labels over the screen heating elements.



Do not scrape or use abrasive materials to clean inside the screens.



- 1. Heated windscreen
- 2. Heated rear screen

Press a switch to operate. The LED will illuminate.

Press again to switch off.

The heating elements in the front screen will switch off automatically after approximately eight minutes.

For maximum effect when defrosting/demisting, use these settings:

- Air distribution to windscreen only.
- Temperature to maximum.
- Blower speed to 3.
- Set recirculation to fresh air.
- Press A/C.

Note: The heated windscreen operates only while the engine is running.