


## WARNING LAMPS AND INDICATORS

-  Do not ignore warning lamps. Take appropriate action as soon as possible. Failure to do so may result in serious damage to the vehicle.

The location and specification of warning lamps may vary according to model and market requirements.

When the ignition is turned on the warning lamps will illuminate. This is a system bulb check procedure and does not indicate a fault.

### BATTERY CHARGE (RED)



If the lamp remains on after the bulb check, or illuminates while driving, a fault is detected with the battery charging system. Seek qualified assistance urgently.

### LOW OIL PRESSURE (RED)



If the lamp remains on after the bulb check, flashes on and off, or illuminates while driving, stop as soon as safety permits and switch off the engine. Seek qualified assistance before turning on the engine.

Always check the oil level if this lamp illuminates.

### DIESEL PARTICULATE FILTER (DPF) (RED)



Illuminates when the DPF is full. If this warning lamp illuminates, the vehicle should be taken to your Dealer/Authorised repairer as soon as possible

### BRAKE (RED)



This warning lamp is shared by three brake systems. If the lamp illuminates while driving, seek qualified assistance before continuing.

**Parking brake.** Illuminates when the parking brake is applied and while the starter switch is in position II. Will extinguish when the parking brake is fully released.

**Brake fluid level.** Illuminates when the brake fluid level is low. If this happens while driving, stop the vehicle gently as soon as safety permits. Check the brake fluid cylinder and top-up if necessary. Have the problem checked by your Dealer/Authorised Repairer.

**Electronic Brake Force Distribution (EBD).** Illuminates when a fault is detected. If this happens while driving, stop the vehicle gently as soon as safety permits. Check the brake fluid cylinder and top-up if necessary. Have the problem checked by your Dealer/Authorised Repairer.

### GLOW PLUGS (AMBER)



Illuminates with the starter switch in position II. Before starting the engine, wait until it extinguishes.

### ENGINE MALFUNCTION (AMBER)



Illuminates to indicate an engine fault. Avoid high speeds and seek qualified assistance urgently.

### DIESEL PARTICULATE FILTER (DPF) (AMBER)



Illuminates when the DPF is approaching capacity. If this warning lamp illuminates, carry out the DPF regeneration procedure as soon as possible (see ).