


CHANGING A BULB

- ⚠ Always replace bulbs with the correct type and specification. If you are in any doubt contact your Land Rover Dealer/Authorised Repairer for advice.

Note: In certain territories it is a legal requirement to carry spare bulbs. A replacement bulb kit is available as an approved accessory from your Land Rover Dealer/Authorised Repairer.

HEADLAMP REMOVAL

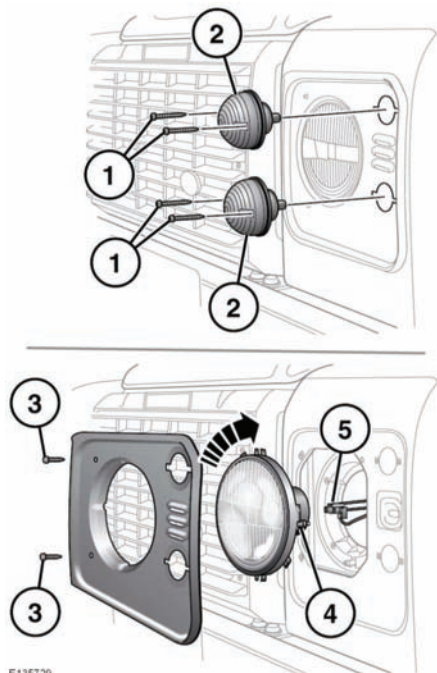

In order to change a headlamp unit bulb, you must first remove the headlamp unit.


1. Undo and remove the four retaining screws.
2. Move the lamps forward and release from the electrical connectors.

3. Undo and remove the two retaining screws. Remove the plastic finisher.
4. Undo and remove the headlamp retaining screw. Rotate the headlamp clockwise to disengage then lift out.
5. Disconnect the electrical plug from the back of the headlamp by pressing in the locking tab and pulling the connector out.

- ⚠ Do not place the lamp unit face down on hard or abrasive surfaces. Doing so may scratch the surface of the lens.

HEADLAMP BULB REPLACEMENT

Halogen bulbs are used for high beam and low beam headlamps. Take care not to touch the glass part of the bulb with your fingers; always use a cloth to handle the bulb. If necessary use methylated spirits to remove finger prints.

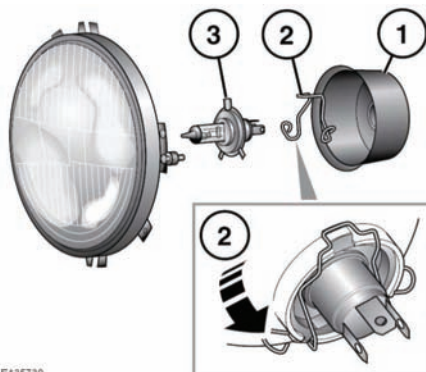

E135730

1. Remove the cover.
2. Release the spring clip that secures the bulb.
3. Remove the bulb.

When refitting the cover, ensure there is a good contact seal around the new bulb. Refit the electrical connector.