


## AUDIO CONTROLS

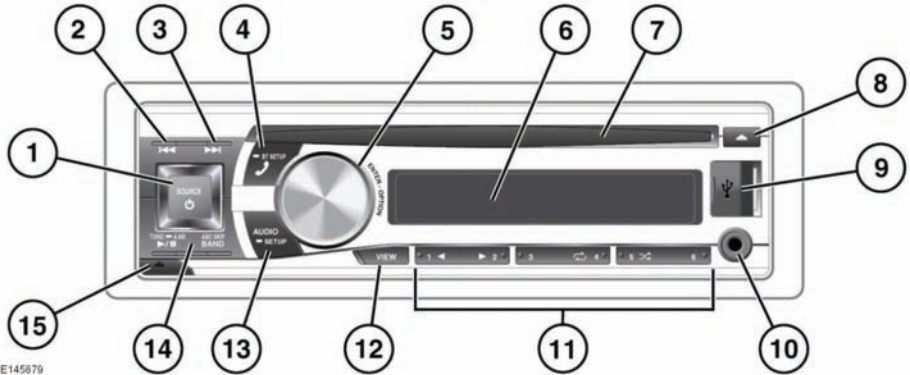

E145879

1. Power/source.
  - Press and hold to turn on/off the audio system.
  - Press briefly to switch source between **TUNER**, **DISC**, **USB AUDIO/iPod**, **BT AUDIO**, and **AUXILIARY**.
    - to scan forward through the track on the chosen audio source - (CD, MP3 etc).
2. Seek down.
  - Short press:
    - to auto seek down the frequency to the previous radio station.
    - to select the previous track on the chosen audio source (CD, MP3 etc).
  - Long press:
    - to seek continuously down through the radio frequencies.
    - to scan back through the track on the chosen audio source (CD, MP3 etc).
3. Seek up.
  - Short press:
    - to auto seek up the frequency to the next radio station.
    - to select the next track on the chosen audio source (CD, MP3 etc).
  - Long press:
    - to seek continuously up through the radio frequencies.
4. Accept/disconnect a telephone call. Press and hold to access the Bluetooth setup menu.
5. Volume control/menu select.
  - Rotate to adjust the volume. When a menu is open, rotate to select the various menu items.
  - Press to select a menu item.
6. Audio information display.
7. CD loading slot.
8. CD eject.
9. USB connection.
10. Auxiliary audio input.
11. Preset buttons.
12. Change the displayed information.
13. **AUDIO/SETUP**.
  - Short press: access the audio settings.
    - Subwoofer.
    - Bass.
    - Mid.