
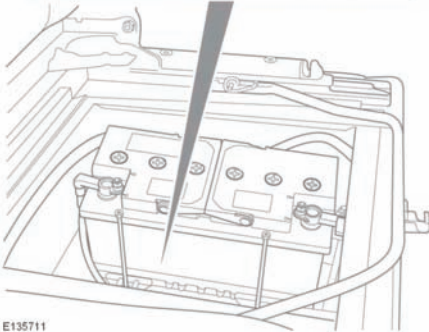


Wheel changing

TOOL KIT

The jack and tools are stored under the left-hand front seat.

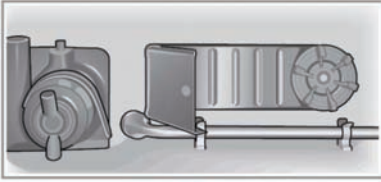

E135711

Examine the jack occasionally, clean and grease the moving parts, particularly the ram. With a bottle jack, check the oil level at the normal vehicle service intervals. Top up with hydraulic oil with viscosity to BS4231 grade 32 and ISO proof 32.

Always return the bottle jack to its fully lowered position and store it upright.



LOCKING WHEEL NUTS

Locking wheel nuts can be removed only by using the special adapter provided in the tool kit.

Note: When the vehicle is first supplied the adapter may be stored in the glove compartment or cubby box. It should be removed and stored in the tool kit as soon as possible.

Note: A code number is stamped onto the underside of the adapter. This number must be recorded on the security card supplied with the literature pack. If a replacement adapter is required you will be asked to quote this number. The security card must be kept safe, but should not be kept with the vehicle.

Releasing locking wheel nuts

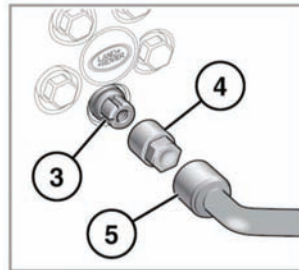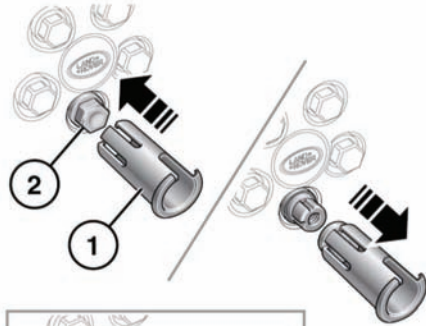

E135712

1. Push the cover removal tool **1** over the locking wheel nut cover **2**. Ensure it is fully engaged.
2. Pull the tool squarely away from the wheel to remove the wheel nut cover.
3. Fit the adapter **4** onto the exposed locking wheel nut **3**.
4. Use the wheel brace **5** on the adapter to release the wheel nut.