



1. Remove the remote control from the key ring and keep it well away from the starter switch.
2. Unlock the driver's door, enter the vehicle and close the door.

**Note:** When the door is opened the alarm will sound for 30 seconds.

3. Insert the key into the starter switch and turn to position **II** until the alarm sounds again.
4. Turn the key to position **0** then open and close the driver's door.
5. Enter the first part of the EKA code by turning the key to position **II** then back to position **0** the same number of times as the EKA number. For example: if the number is 4, turn the key to position **II** and back to position **0** four times.
6. Open and close the driver's door to confirm the entry.
7. Follow the same procedure to enter the next three numbers.

When the code is entered correctly, the alarm indicator in the instrument pack will extinguish, the alarm will be disarmed and the engine will re-mobilise.

If the code is entered incorrectly, the alarm indicator will continue to illuminate and the engine is still immobilised.

Before starting the process again, turn the key to position **II** and hold it for five seconds to reset.

After three failed attempts the security system invokes a delay period of thirty minutes, during which time a further attempt to enter the EKA code will not be accepted.

## REMOTE KEY FOB BATTERY REPLACEMENT

When the battery is due for replacement the following symptoms will be apparent:

- The remote control will work only with a second press of the unlock button.
- The indicators will not flash when the alarm is disarmed.
- Alarm indicator in instrument pack continues to flash rapidly after initial ten second period of rapid flashing.

The remote control battery must be changed while inside the vehicle. DO NOT remove the battery until you are ready to install the replacement. Battery replacement must be completed within five minutes otherwise the EKA code will have to be entered before the remote control can be synchronised to the vehicle.

Fit a new Land Rover STC4080 or a Panasonic CR2032 battery.

While sitting in the driver's seat, follow the process to replace the battery:

1. Insert the key into the starter switch and turn to position **II**. Return it to position **0** and remove the key.
2. Starting at the key ring end and using a small coin or screwdriver, carefully prise apart the remote control.
3. Slide the battery out of its retaining clip. DO NOT touch the internal parts.

## Entering the vehicle



4. Press and hold one of the remote control buttons for at least five seconds to drain off any residual power.
5. Fit the new battery ensuring that the + symbol is facing up. Finger marks on the battery flat surfaces may adversely affect its performance. Ensure that the battery is clean.
6. Press the two parts of the remote control casing together, ensuring that they are fully joined. Moisture and dirt must not be allowed to enter.
7. From outside the vehicle, operate the lock button at least four times. This will synchronise the remote control with the vehicle.
8. Press the unlock button once to unlock.

The remote control is now ready for use.

**Note:** Used batteries must be disposed of correctly as they contain a number of harmful substances. Seek advice on disposal from your local authority.