

**14. Audio settings/system setup.**

- Short press - adjust the audio settings:
  - Bass.
  - Treble.
  - Balance.
  - Fader.
- Long press - access the setup menu:
  - AF (Alternative frequencies).
  - RDS (Radio Data System) regional.
  - PI seek.

**15. Seek up.**

- Short press:
  - to auto seek up the frequency to the next radio station.
  - to select the next track on the chosen audio source - CD, MP3 etc.
- Long press:
  - to seek continuously up through the radio frequencies.
  - to scan forward through the track on the chosen audio source - CD, MP3 etc.

**16. Seek down.**

- Short press:
  - to auto seek down the frequency to the previous radio station.
  - to select the previous track on the chosen audio source - CD, MP3 etc.
- Long press:
  - to seek continuously down through the radio frequencies.
  - to scan back through the track on the chosen audio source - CD, MP3 etc.

**SETTING THE CLOCK**

The clock can be set to automatically adjust according to RDS (Radio Data System) information.

1. Press and hold **AUDIO/SETUP** to open the setup menu.
2. Select **TUNER**.
3. Select **AUTO CLOCK**.
4. Select **A-CLOCK ON** to enable or **A-CLOCK OFF** to disable.
5. Press and hold **AUDIO/SETUP** to close the setup menu.

**INTERFACE COLOUR**

The illumination colour of the audio system can be changed.

1. Press and hold **AUDIO/SETUP** to open the setup menu.
2. Select **DISPLAY**.
3. Select **ILLUM**.
4. Select from the following options:
  - **TYPE1** - blue and red.
  - **TYPE2** - green.
  - **TYPE3** - amber and red.
  - **TYPE4** - red.
5. Press and hold **AUDIO/SETUP** to close the setup menu.