

**NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.**

	Maintenance Interval – whichever occurs first (based on expected vehicle display).										
	Miles x 1000	10	20	30	40	50	60	70	80	90	100
	Years	1	2	3	4	5	6	7	8	9	10
<b>SERVICE</b>	Kilometers x 1000	16	32	48	64	80	96	112	128	144	160
Change engine oil and replace filter		●	●	●	●	●	●	●	●	●	●
<b>VEHICLE INTERIOR</b>											
Reset the Service Interval Indicator		●	●	●	●	●	●	●	●	●	●
Check operation of all lights, warning indicators and horn		●	●	●	●	●	●	●	●	●	●
Check operation of front/rear wiper washer systems		●	●	●	●	●	●	●	●	●	●
Check condition and security of seats and seat belts		●	●	●	●	●	●	●	●	●	●
Replace pollen filter		●	●	●	●	●	●	●	●	●	●
<b>VEHICLE EXTERIOR</b>											
Check condition of wiper blades		●	●	●	●	●	●	●	●	●	●
Check operation of all door checks, hood latch, and fuel flap; lubricate hood catch		●	●	●	●	●	●	●	●	●	●
<b>ENGINE COMPARTMENT</b>											
Check battery condition; check / top up electrolyte level		●	●	●	●	●	●	●	●	●	●
Check / top up fluid levels (brake, coolant, windshield washer)		●	●	●	●	●	●	●	●	●	●
Check specific gravity of coolant		●	●	●	●	●	●	●	●	●	●
Check condition of accessory drive belt		●	●	●	●	●	●	●	●	●	●
Change brake fluid: <b>every 3 years</b>				●						●	
Change engine coolant: <b>every 10 years</b>											●
Replace spark plugs											110,000 miles
Replace air cleaner element		●	●	●	●	●	●	●	●	●	●
Replace accessory drive belt											9 years or 120,000 miles

Maintenance Interval – whichever occurs first (based on expected vehicle display).											
	10	20	30	40	50	60	70	80	90	100	
Miles x 1000											
Years	1	2	3	4	5	6	7	8	9	10	
Kilometers x 1000	16	32	48	64	80	96	112	128	144	160	
<b>SERVICE</b>											
<b>VEHICLE UNDERBODY</b>											
<b>NOTE:</b> Remove all road wheels before inspecting brake components.											
Inspect brake pads for wear, callipers for leaks, and discs for condition	●	●	●	●	●	●	●	●	●	●	●
Check operation of electronic parking brake	●	●	●	●	●	●	●	●	●	●	●
Inspect tire pressures, condition, and tread depth	●	●	●	●	●	●	●	●	●	●	●
Inspect exhaust system for leaks, security and damage	●	●	●	●	●	●	●	●	●	●	●
Inspect for fluid leaks	●	●	●	●	●	●	●	●	●	●	●
Inspect condition of driveshafts, suspension, and steering boots/gaeters	●	●	●	●	●	●	●	●	●	●	●
Check for free play in all suspension mounting bushings	●	●	●	●	●	●	●	●	●	●	●
Inspect fuel, brake, hydraulic and fluid pipes, hoses and unions	●	●	●	●	●	●	●	●	●	●	●
Inspect electrical harnesses, routing and connections	●	●	●	●	●	●	●	●	●	●	●
Lubricate wheel spigot bore with anti-seize compound	●	●	●	●	●	●	●	●	●	●	●
Install road wheels	●	●	●	●	●	●	●	●	●	●	●
Replace all flexible brake hoses: <b>every 6 years</b>						●					
<b>Change transmission fluid</b>											
<b>Every 10 years</b>											
Conduct road test	●	●	●	●	●	●	●	●	●	●	●
If fault lamps are illuminated, interrogate with IDS/SDD and report findings	●	●	●	●	●	●	●	●	●	●	●
Check for any outstanding Recalls or Service Actions	●	●	●	●	●	●	●	●	●	●	●
Endorse Service Record	●	●	●	●	●	●	●	●	●	●	●