

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance interval – whichever occurs first (based on expected vehicle display).									
		Miles x 1000	10	20	30	40	50	60	70	80	90
SERVICE		Years	1	2	3	4	5	6	7	8	9
		Kilometers x 1000	16	32	48	64	80	96	112	128	144
			160								
Change engine oil and replace filter		●	●	●	●	●	●	●	●	●	●
VEHICLE INTERIOR											
Reset the Service Interval Indicator		●	●	●	●	●	●	●	●	●	●
Check operation of all lights, warning indicators and horn		●	●	●	●	●	●	●	●	●	●
Check operation of front/rear wiper washer systems		●	●	●	●	●	●	●	●	●	●
Check condition and security of seats and seat belts		●	●	●	●	●	●	●	●	●	●
Replace pollen filter		●	●	●	●	●	●	●	●	●	●
VEHICLE EXTERIOR											
Check condition of wiper blades		●	●	●	●	●	●	●	●	●	●
Check operation of all door checks, hood latch, and fuel flap; lubricate hood catch											
ENGINE COMPARTMENT											
Check battery condition; check / top up electrolyte level		●	●	●	●	●	●	●	●	●	●
Check / top up fluid levels (brake, coolant, windshield washer)											
Check specific gravity of coolant		●	●	●	●	●	●	●	●	●	●
Check condition of accessory drive belt		●	●	●	●	●	●	●	●	●	●
Change brake fluid: every 3 years											
Change engine coolant: every 10 years											
Replace spark plugs											
Replace air cleaner element											
Replace accessory drive belt											
										110,000 miles	
										9 years or 120,000 miles	

		Maintenance Interval – whichever occurs first (based on expected vehicle display).										
SERVICE	VEHICLE UNDERBODY	Miles x 1000	10	20	30	40	50	60	70	80	90	100
		Years	1	2	3	4	5	6	7	8	9	10
		Kilometers x 1000	16	32	48	64	80	96	112	128	144	160
NOTE:	Remove all road wheels before inspecting brake components.											
	Inspect brake pads for wear, calipers for leaks, and discs for condition	●	●	●	●	●	●	●	●	●	●	
	Check operation of electronic parking brake		●	●	●	●	●	●	●	●	●	
	Inspect tire pressures, condition, and tread depth		●	●	●	●	●	●	●	●	●	
	Inspect exhaust system for leaks, security and damage		●	●	●	●	●	●	●	●	●	
	Inspect for fluid leaks		●	●	●	●	●	●	●	●	●	
	Inspect condition of driveshafts, suspension, and steering boots/gaiters		●	●	●	●	●	●	●	●	●	
	Check for free play in all suspension mounting bushings		●	●	●	●	●	●	●	●	●	
	Inspect fuel, brake, hydraulic and fluid pipes, hoses and unions		●	●	●	●	●	●	●	●	●	
	Inspect electrical harnesses, routing and connections		●	●	●	●	●	●	●	●	●	
	Lubricate wheel spigot bore with anti-seize compound		●	●	●	●	●	●	●	●	●	
	Install road wheels		●	●	●	●	●	●	●	●	●	
	Replace all flexible brake hoses: every 6 years							●				
	Change transmission fluid								Every 10 years			
	Conduct road test							●	●	●	●	
	If fault lamps are illuminated, interrogate with IDS/ISDD and report findings							●	●	●	●	
	Check for any outstanding Recalls or Service Actions							●	●	●	●	
	Endorse Service Record							●	●	●	●	