ENGINE COMPARTMENT OVERVIEW



E145312

- 1. Engine oil filler cap (4.4L diesel).
- 2. Engine oil filler cap (3.0L diesel).
- 3. Engine oil filler cap (5.0L petrol).
- 4. Brake fluid reservoir cap.

Note: The brake fluid reservoir cap is always located on the driver's side of the vehicle.

- 5. Windscreen washer fluid filler cap.
- 6. Dynamic response fluid reservoir cap.
- 7. Engine coolant filler cap.



Do not drive if there is a possibility that leaked fluid will come into contact with a hot surface, such as the exhaust.