MANUAL SEATS



E140651

To adjust the angle of the seat back:

- 1. Lift the adjustment lever.
- 2. Adjust the seat back to the desired angle.
- 3. Release the adjustment lever.

MASSAGE SEATS



- 1. Massage on/off. *Note:* Massage seats will only operate with the engine running.
- 2. Bi-directional massage.

- 3. Upward massage.
- 4. Downward massage.

Note: Massage programmes have a specific timed cycle, which will need to be re-selected for continuos use.

PASSENGER SEAT AWAY





E140676

- 1. Located on the front passenger seat.
- 2. Located on the rear centre console (Business class rear seats only).

The front passenger seat position can be adjusted to provide more space for rear seat occupants. Use the relevant switch for forward or rearward adjustment.