

# Tyre pressure monitoring system (TPMS)

## VEHICLE LOADING

It is possible to select different tyre pressure monitoring levels that correspond to the tyre pressures and load information on the tyre pressure label for a light or heavily laden vehicle. See **225, TYRE PRESSURES**.

**Note:** Make sure that the tyre pressures are correct for the vehicle load.

The different tyre pressure monitoring levels can be set via the **Vehicle Set-Up** menu in the Message centre. See **63, INSTRUMENT PANEL MENU**.

**Note:** The TPMS setting must correspond with the vehicle load.

## FULL SIZE SPARE WHEEL AND TYRE CHANGE

The system will automatically recognise any changes in wheel positions. The vehicle must be stationary for 15 minutes during the wheel and tyre change, to ensure that the system can detect the change. After driving above 25 km/h (18 mph) any deflation warning should clear within approximately 5 minutes.

## TEMPORARY USE SPARE WHEEL AND TYRE CHANGE

If the temporary use spare wheel is fitted, the system will automatically recognise the change in wheel positions. After approximately 10 minutes of driving above 25 km/h (18 mph), the message **FRONT[REAR] RIGHT[LEFT] TYRE PRESSURE NOT MONITORED** will be displayed, accompanied by illumination of the warning lamp.

The warning lamp will first flash and then illuminate continuously. Extended use of the temporary use spare wheel will trigger the message **TYRE PRESSURE MONITORING SYSTEM FAULT**.

This TPMS display sequence will be activated at every ignition cycle until the temporary spare wheel is replaced by a full-size road wheel with a TPMS sensor fitted.

**Note:** If in use, always replace the temporary spare wheel before having a TPMS fault investigated.