

# Starting the engine

If the Smart Key is not recognised, or the engine still fails to start, consult a Land Rover Dealer/Authorised Repairer.

If the engine still fails to crank or start, consult a Land Rover Dealer/Authorised Repairer.

## IF THE ENGINE FAILS TO START

**Note:** *If the engine fails to crank when the engine START/STOP button is pressed and there has been a recent collision, the fuel system inertia switch may have been tripped. Seek qualified assistance.*

Make sure that the brake pedal is not depressed. Switch on the ignition (see **96, STARTING THE ENGINE**) and check the instrument panel for warning lights and the message centre for warning messages (see **62, INSTRUMENT PANEL**). Seek qualified assistance if necessary.

Switch off the ignition.

To reset the immobiliser and alarm system use the valid smart key to lock and unlock the vehicle (see **4, UNLOCKING THE VEHICLE**).

**Note:** *The following information applies to petrol engine vehicles only.*

If the engine persistently fails to start.

1. Make sure that a valid Smart Key is inside the vehicle.
2. Firmly depress the brake pedal.
3. Ensure that Park (**P**) or Neutral (**N**) is selected.
4. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
5. Slowly depress the accelerator pedal fully and hold it in the fully depressed position.
6. Press and release the engine **START/STOP** button. The engine will begin to crank.
7. Release the accelerator pedal when the engine starts.

Once the engine has started, the brake pedal can be released if it is safe to do so.