


## DOOR LOCKS AND RELEASE LEVERS

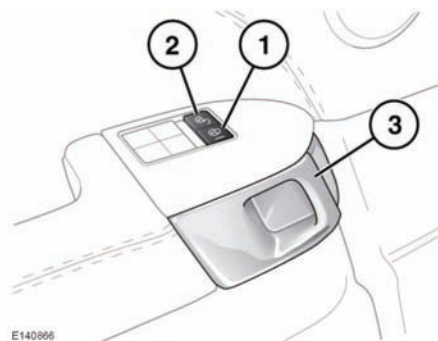

### 1. Unlock:

- Press the driver or front passenger door unlock button to unlock all doors. Alternatively, pull the door release handle (3) once to unlock the individual door.
- Press the rear passenger door unlock button to unlock the individual door. Alternatively, pull the door release handle (3) once.

**Note:** The unlock button is inhibited when the vehicle is locked with the Smart Key.

### 2. Lock:

- Press the driver or front passenger lock button to lock all doors.
- Press rear passenger lock button to lock the individual door.

3. Door release handle: pull to open the door. If the door is locked, pulling the handle once will unlock the door.

## MISLOCK

When attempting to lock the vehicle, if one or more of the doors, the bonnet or the tailgate are not fully closed, the vehicle will fail to lock and an audible warning will sound twice. The vehicle will not fully lock until all doors, the bonnet and the tailgate are completely closed.

## DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered it can be deactivated by pressing the Smart Key unlock button, or by positioning the Smart Key against the steering column (see 97, **KEYLESS START BACKUP**).