

1. To access the luggage compartment fuse box (upper), open the rear tailgate. See **8, OPENING AND CLOSING THE TAILGATE** Remove the first access panel. Grasp the top of the panel and pull sharply. A label on the rear of the access panel shows the circuits protected and the fuse locations.
  - When refitting the access panel, ensure that the locating/securing pegs are aligned with their respective holes before pushing the panel fully home.
2. To access the luggage compartment fuse box (lower), remove the second access panel. Grasp the top of the panel and pull sharply. A label on the rear of the access panel shows the circuits protected and the fuse locations.
  - When refitting the access panel, ensure that the locating/securing pegs are aligned with their respective holes before pushing the panel fully home.
3. To access the passenger compartment fuse box open the glove box. See **89, STORAGE COMPARTMENTS** Press the top of the support stay at each end, and lower the glove box into the foot well. A label on the rear of the glove box shows the circuits protected and the fuse locations.
4. To access the engine compartment fuse box remove the under bonnet cover. See **199, UNDER BONNET COVERS - REMOVAL** Release the clip at each end of the fuse box cover.
5. Lightly lift up the leaf screen panel to allow the removal of the fuse box cover.
6. Remove the fuse box cover. A label on the inside of the cover shows the circuits protected and the fuse locations.

## CHANGING A FUSE



Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.



If the replacement fuse blows after installation, the system should be checked by your Land Rover Dealer/Authorised Repairer.

**Note:** *Land Rover recommend that relays should only be replaced by qualified persons.*

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.