LOADSPACE COVER



E142954



Do not store the loadspace cover loose in the vehicle.



Never place objects on top of the loadspace cover. During an accident or sudden manoeuver, loose objects can cause serious injury or death.

1. To fold the loadspace cover, push firmly down and forwards.



- 2. Lift slightly and fold forwards.
- **3.** Pull the whole assembly rearwards to disconnect the locating pins. Remove and store safely.
- 4. If removal from inside the vehicle is necessary, a head restraint may require removal.