

## ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

When cornering using low beam, AFS will adjust the headlamp beams to provide improved illumination in the direction of travel.

AFS is deactivated when:-

- Reverse gear is selected.
- The vehicle is stationary.
- Daytime running lamps are on.

If a system fault is detected the headlamps will attempt to move to the central position, and remain stationary. The AFS warning lamp will illuminate to indicate that a fault is present.



If the warning lamp illuminates, contact your Land Rover Dealer/Authorised Repairer as soon as possible.

## HEADLAMPS - DRIVING ABROAD

The headlamps have a beam pattern that eliminates the need to mechanically adjust the lamps or add any external obscuration decals.

To configure the system for the side of the road on which you are driving, proceed as follows:

1. Using the menu control on the steering wheel, select **Vehicle set-up** via the message centre.
2. Select **High Beam Assist**.
3. Select **Drive on Left** or **Drive on Right**, for the side of the road that you are driving.

## HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.