

5. Touch to end the program.
6. Touch to display a menu which allows the driver's seat Auto massage to be switched **On** or **Off** and to set the Time delay from the start of the journey to **5, 15, 30** or **60** minute intervals.

After 10 minutes, the seat massage will stop automatically.

## AUXILIARY HEATER

Your vehicle may be fitted with an auxiliary heater which is powered by fuel drawn from the vehicle's tank. The heater only operates at low ambient temperatures, and is controlled by the Timed climate control system.

When the heater is operating, exhaust fumes from the heater may be visible exiting from under the front of the vehicle. This is normal and is not a cause for concern.



**Do not operate the auxiliary heater when refuelling the vehicle. Doing so may cause fuel vapours to combust causing a fire/explosion.**



**Do not operate the auxiliary heater while the vehicle is in an enclosed space. Doing so can cause a build up of highly toxic fumes which may cause unconsciousness or death.**

## TIMED CLIMATE CONTROL

The timed climate control system provides a comfortable temperature inside the cabin in advance of driver and passengers entering. Dependent on the external temperature, the system draws in fresh air to cool the cabin or operates the auxiliary heater to warm it.

The auxiliary heater is also operated to warm the engine and aid starting in very cold conditions.

The timed climate control system may be operated by either the touch screen or the remote handset.

The system may not operate or will switch off automatically in the following scenarios.


- If the fuel level is low.
- If the vehicle's battery charge is low.
- If the coolant temperature is at or above its required temperature.

## SETTING A TIME FOR TIMED CLIMATE OPERATION

The touch screen can be used to either preset activation times or to operate the system manually.

When the system is operating, the LED in the climate control **AUTO** button will flash.

**Note:** *The system will cease operation if the engine is started*

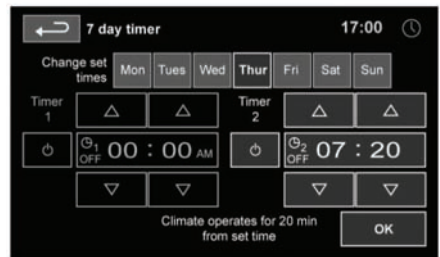

E140084

To set a timed climate program:

1. 1. Press the **HOME MENU** hard key.
2. Touch the **Timed Climate** soft key. This soft key may be set on a personal shortcut or accessed via the **Extra Features** soft key. Select the day for which you want to set a program or select **All Week** to select the same start time for every day.