


REAR MEDIA CONTROL FROM THE TOUCH SCREEN

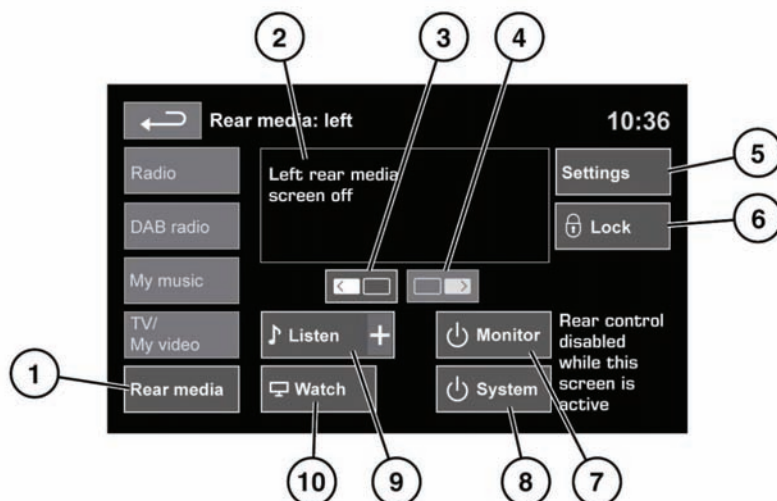

E142716

1. Select rear media.
2. Current media display.
3. Left screen select.
4. Right screen select.
5. Settings screen.
6. Remote control lock.
7. Turns the selected screen on/off.
8. Rear media on/off, for the selected user.
9. Audio source select.
10. Video source select.

Note: When the main rear media control screen is displayed on the touch screen, the rear media remote control will be locked out.