

Heating and ventilation

- Touch the down arrow icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the down arrow a third time to switch off seat ventilation.

Cooled ventilation:


- Touch the down arrow icon to switch cooled ventilation on at maximum (3 blue bars).

- Touch the up arrow icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the up arrow a third time to switch off seat ventilation.

Seat zone selection:

- Constant selection of the **Seat zone** soft key will scroll through the 3 choices of seat zone; full seat, cushion or back rest only.

SEAT MESSAGE

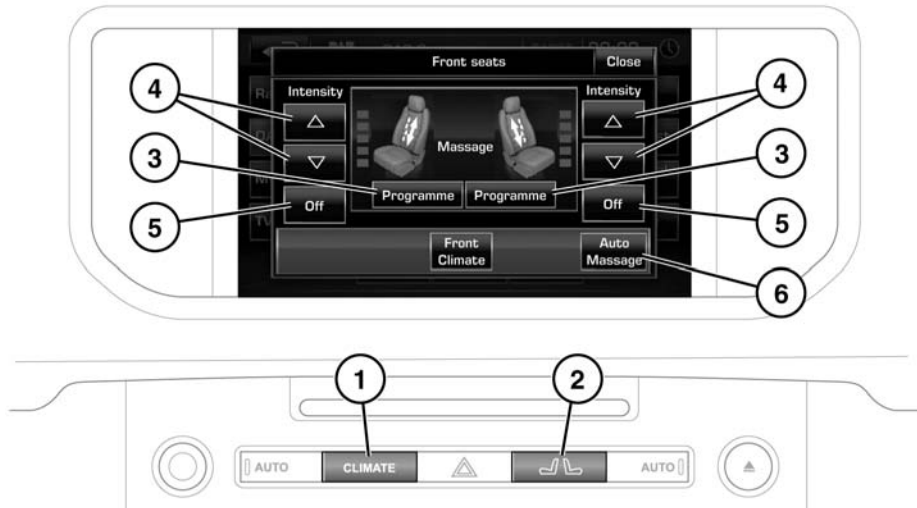

E142867

Note: Seat massage will only operate when the engine is running.

Seat massage may not operate when the vehicle interior temperature is below 0°C or above 50°C (32°F or 122°F respectively).

Seat massage is controlled through the touch screen. Either:

1. Press to display the Front Climate menu. Touch the **Seats** soft key, then touch the **Message** soft key or;
2. Press to display the Front seats pop-up menu. Then touch the **Message** soft key.
 - The pop-up menu screens will overlay the current screen. They will time out after a short period and the previous menu screen will be displayed.
3. Touch to display the desired seat massage program. Constant selection will scroll through the 5 different programs.
4. Touch to vary the intensity of the selected program.