## **DAB RADIO CONTROLS**



E142729

 DAB Radio: Touch to view and select a DAB band (DAB 1, 2 or 3). The radio will tune to the last used channel on that band. Touch again to close.

The DAB band selection box will close automatically after 5 seconds without use.

- 2. Indicates currently selected DAB band (DAB1, 2 or 3).
- 3. Seek down:
  - Short touch to seek previous available channel.
  - Long touch to seek previous available Ensemble. The first channel in the new Ensemble will be selected.
- **4.** Channel information: Touch to view DAB text and channel information.
- 5. Seek up:
  - Short touch to find the next available channel.
  - Long touch to find the next available Ensemble. The first channel in the new Ensemble will be selected.

- 6. Settings: Touch to view the DAB Settings menu:
  - **Options:** To activate/deactivate FM Traffic and Link DAB and to alter DAB country and format settings (with vehicle stationary).
  - Announcements: Select an alarm announcement and up to 3 other announcement types (traffic, news etc.) from the list. The selected announcements will interrupt the current programme when broadcast.