



E141252

1. Connect one end of the positive (Red) jump lead to the positive terminal on the donor vehicle.
2. Connect the other end of the positive (Red) jump lead to the positive terminal on the disabled vehicle.
3. Connect one end of the negative (Black) jump lead to the negative terminal on the donor vehicle.

4. Connect the other end of the negative (Black) jump lead to the negative terminal on the disabled vehicle.

Note: Check that all cables are clear of any moving components, and that all four connections are secure.
5. Start the engine of the donor vehicle, and allow it to idle for a few minutes.
6. Start the engine of the disabled vehicle.

Note: Do not switch on any electrical circuits on the previously disabled vehicle, until after the jump leads have been removed.
7. Allow both vehicles to idle for a few minutes.
8. Switch off the donor vehicle.
9. Disconnect the negative (Black) jump lead from the previously disabled vehicle.
10. Disconnect the negative (Black) jump lead from the battery of the donor vehicle.
11. Disconnect the positive (Red) jump lead from the previously disabled vehicle.
12. Disconnect the positive (Red) jump lead from the donor vehicle.

CONNECTING A STARTING AID



Do not connect the starting aid to any battery terminal on your vehicle. Doing so may cause a spark, which can result in an explosion. It may also result in damage to the charging system.

To start the vehicle using a starting aid or a slave battery, follow the instructions in the sequence given.

1. Connect the positive (Red) cable to the positive terminal of the disabled vehicle.
2. Connect the negative (Black) cable to the negative terminal of the disabled vehicle.