










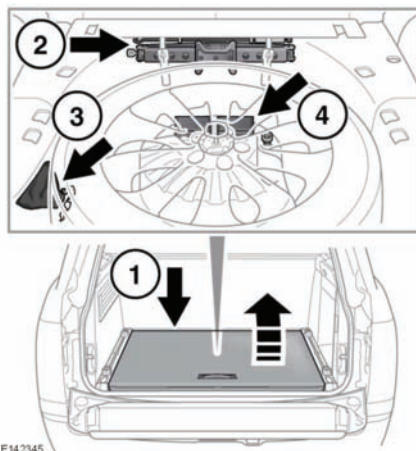
## WHEEL CHANGING SAFETY

Before raising the vehicle or changing a wheel, ensure that you read and comply with the following warnings.

-  **Always find a safe place to stop, off the highway and away from traffic.**
-  **Ensure that the vehicle and jack are both on firm level ground.**
-  **Apply the parking brake and engage Park (P).**
-  **Ensure the air suspension is set to off road height.**
-  **Switch on the hazard warning lamps.**
-  **Ensure that the front wheels are in the straight ahead position.**
-  **Disconnect trailer/caravan from vehicle.**
-  **Ensure that all passengers and animals, are out of the vehicle and in a safe place away from the highway.**
-  **Place a warning triangle at a suitable distance behind the vehicle, facing towards oncoming traffic.**

## TOOL KIT

*Note: Tool types and positions may vary from the illustrations.*



The jack (2) and the spare wheel lift assist tool (3) are located under the loadspace floor panel (1) adjacent to the spare wheel.

**Note:** *Examine the jack occasionally, clean and grease the moving parts, particularly the screw thread, to prevent corrosion.*

The tool kit (4) is located under the spare wheel. See **238, REMOVING THE SPARE WHEEL**

**Note:** *Take careful note of the stowage position for each tool, as it is important to return them to their correct position after use.*