

## Entering the vehicle

6. Emergency key access: Slide open the side cover to release, then remove.
7. Remove the emergency key blade and unfold.
8. If the Smart Key fails to open the vehicle, insert the key blade into the slot at the base of the door lock cover and gently lever the key blade upwards. Carefully rotate the door lock cover upwards, to lever the cover off the retaining clips. Insert the key blade into the exposed lock and turn to operate the lock. The alarm will sound.

**Note:** When the driver's door is unlocked using the key blade, the alarm will sound until the Smart Key is positioned correctly.

**Note:** A replacement Smart Key can be obtained only from a Land Rover Dealer/Authorised Repairer. The Land Rover Dealer/Authorised Repairer will require proof of identification and ownership.

Notify a Land Rover Dealer/Authorised Repairer immediately if a Smart Key is lost or stolen.

9. Keyless entry/exit:
  - Exterior door handles have separate unlock and lock sensors. The unlock sensor is located on the inner surface of the handle.

### SINGLE/MULTI-POINT ENTRY

When you press the unlock button, your vehicle will unlock in one of two ways:

1. Single Point Entry: Unlocks the driver's door and fuel filler only. A second press is required to unlock the remaining doors and the tailgate.
2. Multi-Point Entry: Unlocks all doors, fuel filler flap and the tailgate on the first press.

To change from Single to Multi-Point entry (or vice versa), press both the lock and unlock buttons simultaneously for three seconds. The hazard warning lamps will flash twice to confirm the change.

This feature may also be set via the **Vehicle Set-Up** menu. See **63, INSTRUMENT PANEL MENU**.

**Note:** If, when the vehicle is unlocked, an audible warning is emitted, this will be a 'Mislock' error. There may be a fault with either of the alarm sensors. Consult with your Land Rover Dealer/Authorised Repairer as soon as possible.

### GLOBAL OPENING

Press and hold the unlock button for 3 seconds to unlock the vehicle and open all windows.

To cancel global opening, press any of the buttons on the Smart Key or operate the driver's window switch. To stop a particular window opening, operate the relevant window switch.

**Note:** Global opening does not open the sunroof.

This feature can be enabled/disabled via the **Vehicle Set-Up** menu (see **63, INSTRUMENT PANEL MENU**).